

Sprayer 6875-9Q-80CP

NO	Part NO.	Part Name	QTY
1	0508-A2-5400	Spring	1
2	0770-9C-5101	Gaskets	1
3	0770-WL-7529	Mesh Cover	1
4	0771-WP-68CP	Connector	1
5	0875-9Q-22CJ	Sprayer Body	1
6	0875-QA-68CP	Sprayer Button	1
7	0875-QJ-68RB	Inner Tube Adaptor	1
8	0875-QK-7500	Plastic Spacer	1
9	0920-AU-7900	Gasket With Filter	1
10	0752-9N-5101	Rubber Sealing	1
11	0875-QB-68RB	Sprayer Button Adaptor	1
12	0875-QM-7500	Plastic Sealing Spacer	1
13	6875-PA-8000	Shaft & L-Plate	1
14	D058-00-5100	Ruber Gasket	1
15	E063-00-5400	SST Washer	1
16	0874-Y4-5117	Sealing	1
17	0875-PB-5400	Central Shaft	1
18	0875-QH-68RB	Central Shaft Retaining Nut	1
19	0875-QL-68RB	Retaining Spacer	1
20	C158-00-5101	O-Ring	1
21	C164-00-5101	O-Ring	1
22	G027-00-77CP	Sprayer Outer Tube	1
23	G028-00-5400	Sprayer Inner Tube (SST)	1
24	M030-00-5400	Spring	1

