
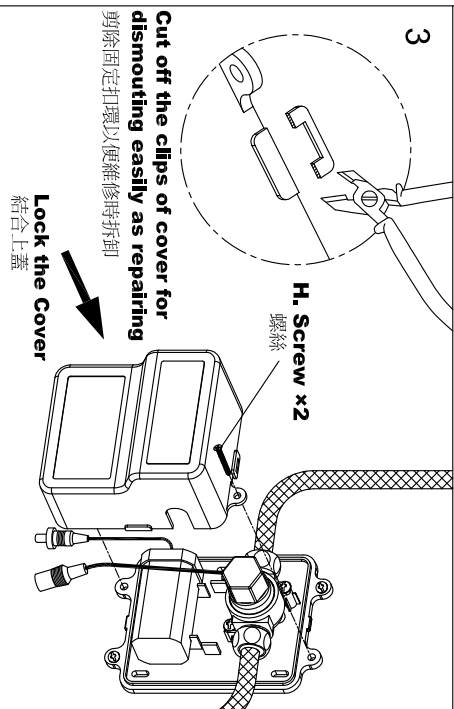
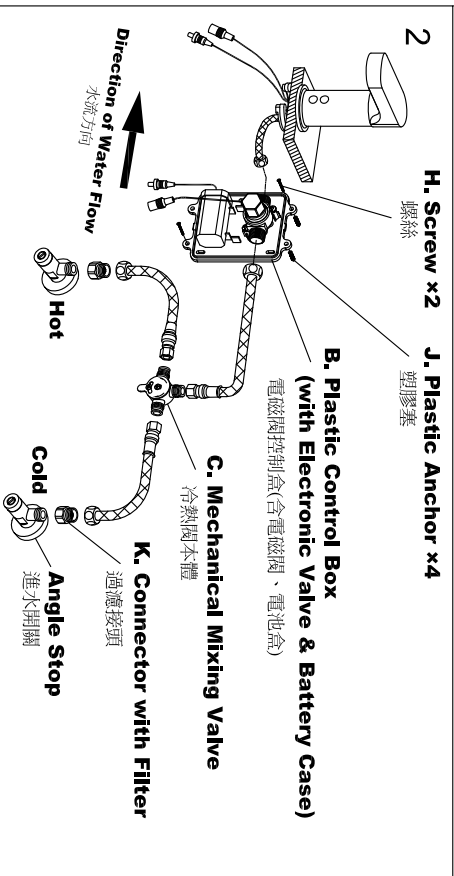


INSTALLATION INSTRUCTIONS

Electronic Basin Faucet with Mixing Valve
感應式龍頭(冷熱混合)



※ Mounting the Plastic Control Box without Screw, please follow the Installation of Plastic Control Box.
若不使用螺絲固定電磁閥控制盒，請見電磁閥控制盒說明書

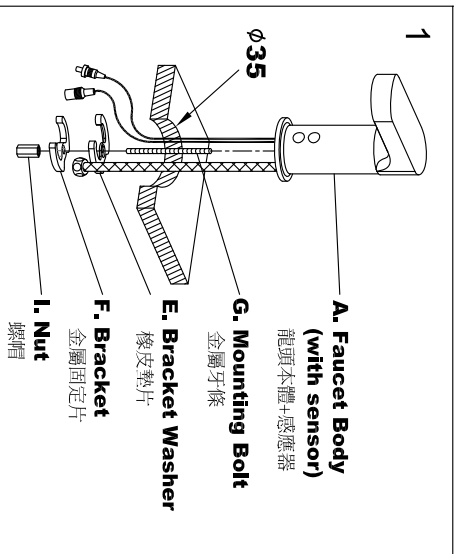

Screw **Mounting Bolt** into **Faucet Body**. Insert **Flexible Hoses**, **Mounting Bolt** and **wires** through basin hole in fixture. Place **Bracket (with Braket Washer)** and **Nut** onto **Mounting Bolt**, position faucet on fixture, then tighten **Nut** securely.

Take off the cover of **Plastic Control Box**, connect the **Flexible Hoses** to **Faucet, Electronic Valve, Mechanical Mixing Valve** and **Connector with Filter**. Select proper position for **Plastic Control Box** and mark center of mounting holes on wall. Using a 6mm drill-bit, drill the holes in marked positions to a depth of 4cm. Insert four **Plastic Anchors** and install the **Plastic Control Box** on the wall with two screws as fig.2 shown.取下電磁閥控制盒的上蓋，將編織管、電磁閥、冷熱閥、過濾接頭結合(圖2)。選擇欲安裝電磁閥控制盒的位置並畫上鑽孔記號，使用6mm鑽頭鑽孔(深度4cm)。安裝四顆塑膠膠塞後，先以二顆螺絲將電磁閥控制盒固定於牆面。

Cut off the clips of cover for dismounting easily as repairing. After install the batteries, lock the cover with the first of two screws and open the Angle Stop. (Note: Please DO NOT cut the clips of cover if you need it to fix the cover.)將上蓋的固定扣環剪除以便維修拆卸。安裝電池後，用另一顆螺絲結合上蓋，並打開進水開關。(注意：若不以螺絲固定電磁閥控制盒，請不要剪除上蓋的固定扣環)

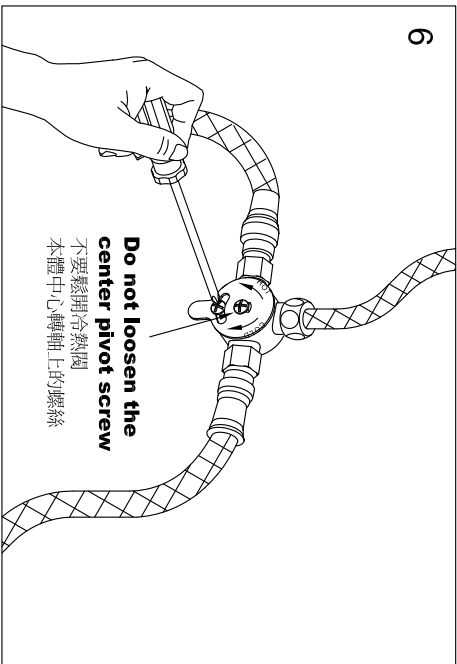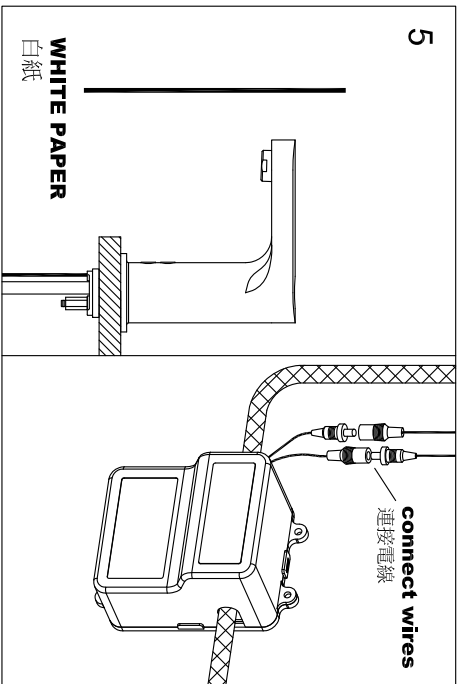

CAUTION : Risk Of Product Damage.
注意：為增加產品使用壽命，請依說明清潔供水管路。
a/ Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body. or b/
安裝編織管之前，先把供水開關全開排水一分鐘。或 b/
b/ Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.把龍頭、供水開關及編織管接好並鎖緊之後，拆下起泡器，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

Trouble Shooting
故障排除

1. If the **Flush Valve** doesn't work :
若有未出水的情況，請檢查：
whether there is water comes from the pipe.
→please check the water supply system
管路是否有水→檢查供水系統
whether the power of battery is enough.
→please replace battery
電力是否足夠→更換電池
Whether the power is connected
→please plug in
電源是否連接→接上電線
2. If the flow rate gets lower :
水流量變少
Whether there are obstructions of Connector with Filter
→please clean the Filter
檢查過濾接頭是否堵塞→清潔濾網

The sensor would adjust the distance of reaction automatically after the wires has been connected. If you need reset distance of reaction, please place a white paper in front of the sensor at the proper position before connect the wires. (The farthest distance is 40 cm)
連接電線後，感應器將依現場環境自動調整感應距離。若須自訂感應距離，請在連接電線之前，以白紙固定於感應器前方再接上電源(最遠可調整至40公分)

Loosen the **Mechanical Mixing Valve** dial plate lock-screw, adjust the proper water temperature as the direction of the arrows, then tighten the lock-screw to lock adjustment. (Caution: Do not attempt to loosen the center pivot screw.)
鬆開冷熱閥本體上調節溫度的螺絲，適當調整出水溫度，然後鎖緊螺絲，完成溫度調節的功能(警告：不要試圖鬆開冷熱閥本體中心轉軸上的螺絲)

Note : Install the Connector with Filter provided between the **Flexible Hose** and **Angle Stop** to filter the impurities of water and prolong the lifespan of faucet.
注意：在不鏽鋼軟管與進水開關之間，請務必裝上隨附的過濾接頭，可過濾水中雜質並增加產品壽命。
Connector with Filter
過濾接頭

1. Power Source: Alkaline Battery AA x 4, DC6V(1.5V x 4)
電源建議：DC1.5V AA x 4 (6V) 鹼性電池
2. Power up Procedure: Power Up →Turn Valve Off →LED Blink twice →Turn Valve On →Setting Water Flow Parameters, LED Blink Twice at the same time →Turn Valve off →Setting Non Water Flow Parameters, LED Blink Twice at the same time →LED Blink Twice again →Normal Routine Operation
開機程序：通電→開關→LED閃兩次→開關→LED閃兩次，偵測水流環境參數→開關→LED閃兩次，偵測沒水環境參數→LED閃兩次→正常工作
3. Power up Safety Guard: Valve Off after Power up
每次新裝電池，開機指示燈確認後，立即送出關水信號一次確保電磁閥為關水狀態
4. The faucet can stand the pressure from 0.3 to 10 kg/cm2
適用水壓0.3~10 KG/CM2
5. Aerator with pivot joint can be tilted for 7 degrees
起泡頭可調整角度為前後7度
6. Safety Guard: Valve off if water flowing over 45sec
自保模式：連續給水45秒後自動閉關
7. Sensing Range: Range Auto Adjustment within 40cm (by A4 white)
感應距離：自動調距最遠40cm (A4 白紙)
8. The sensor might not be operated normally as the water pressure has been increased over 2 kg/cm. Please plug out the power and plug in again after 5 seconds for the sensor retesting the water flow, and then sensor will be operated regularly.
環境偵測：若水壓超過安裝時的水壓達2公斤以上，可能因水花顏色導致感應器無法正常工作，此時請將電源拔掉約5秒再接上，讓感應器重新偵測水花後即可正常運作

Specification Sheet
規格表